

G Series LCD Monitor

G244F E2 (3BB4) G244PF E2 (3BB4)

User Guide

Contents

Getting Started	3
Package Contents	3
Installing the Monitor Stand	4
Adjusting the Monitor	6
Monitor Overview	8
Connecting the Monitor to PC	11
OSD Setup	13
Navi Key	13
Hot Key	14
OSD Menus	15
Gaming	15
Professional	17
Image	18
Input Source	19
Navi Key	19
Setting	20
Specifications	22
Preset Display Modes	24
Troubleshooting	25
Safety Instructions	26
TÜV Rheinland Certification	28
Regulatory Notices	29

Revision

V1.0, 2023/09

Getting Started

This chapter provides you with the information on hardware setup procedures. While connecting devices, be careful in holding the devices and use a grounded wrist strap to avoid static electricity.

Package Contents

Monitor	G244F E2, G244PF E2	
Documentation	Quick Start Guide	
Accessories	Stand with Screw(s)	
	Stand Base with Screw(s)	
	Screw(s) for Wall Mount Bracket(s)	
	External Power Supply & Power Cord	
Cables	Premium High Speed HDMI™ Cable (Optional)	




1 Important

- Contact your place of purchase or local distributor if any of the items is damaged or missing.
- Package contents may vary by country.
- The included power cord is exclusively for this monitor and should not be used with other products.


Installing the Monitor Stand

- 1. Leave the monitor in its protective packaging. Align the stand bracket to the monitor groove.
- 2. Tighten the stand bracket with screws.
- 3. Connect the base to the stand and tighten the base screw to secure the base.
- **4.** Make sure the stand assembly is properly installed before setting the monitor upright.

G244F E2

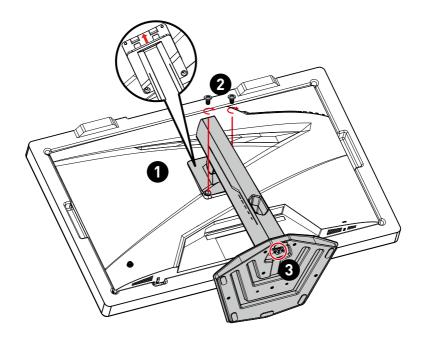

G244PF E2

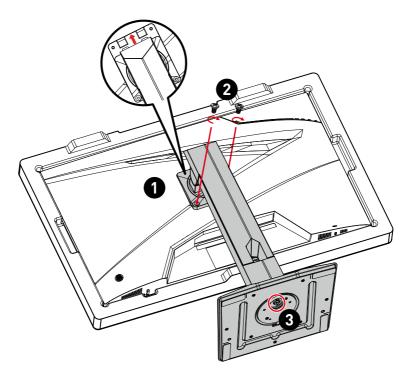

/ Important

- Place the monitor on a soft, protected surface to avoid scratching the display panel.
- Do not use any sharp objects on the panel.
- The groove for installing the stand bracket can also be used for wall mount. Please contact your dealer for proper wall mount kit.
- This product comes with NO protective film to be removed by the user! Any mechanical damages to the product including removal of the polarizing film may affect the warranty!



Adjusting the Monitor


This monitor is designed to maximize your viewing comfort with its adjustment capabilities.




Important

Avoid touching the display panel when adjusting the monitor.

G244F E2

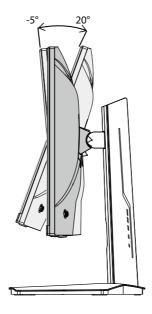


G244PF E2

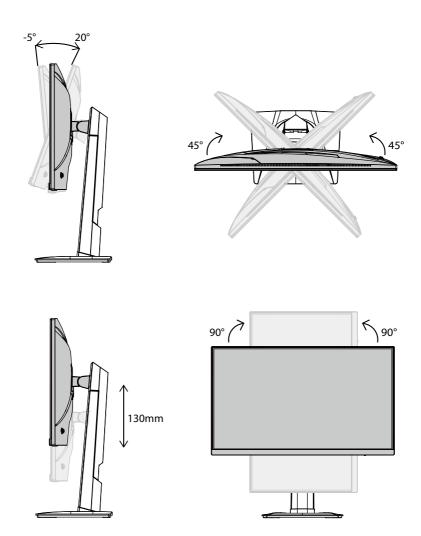


Monitor Overview

G244F E2

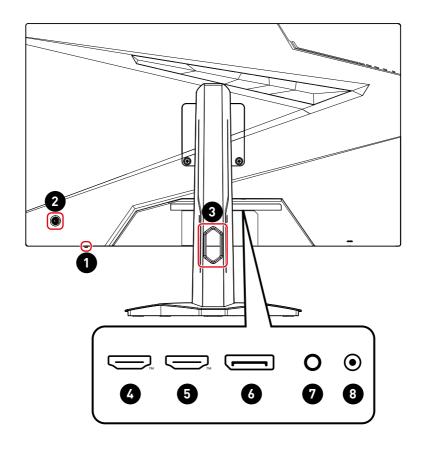

G244PF E2

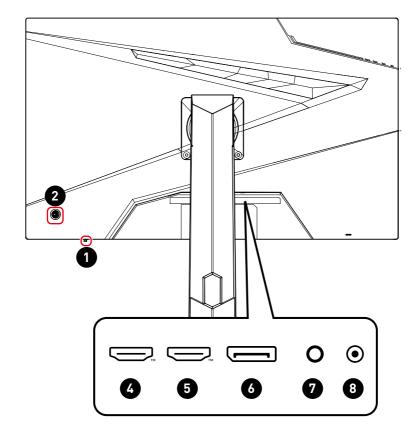


	Power LED
U	Lit in white after the monitor is turned on. If no signal input, the LED will turn into orange. Lit in orange when the monitor is in Stand-by mode.
2	Power Button & Navi Key
3	Cable Routing Hole
4	HDMI™ Connector NIGH-SETNITION MULTIMESIA NITERIAGE Supports HDMI™ CEC, 1920x1080@180Hz as specified in HDMI™ 2.0b.
5	HDMI TM Connector HIGH-DEFINITION MULTIMEDIA RIVERFACE
	Supports 1920x1080@180Hz as specified in HDMI™ 2.0b.
6	DisplayPort
•	Supports 1920x1080@180Hz as specified in DisplayPort 1.2a.
7	Headphone Jack
8	Power Jack


Connecting the Monitor to PC

- 1. Turn off your computer.
- 2. Connect the video cable from the monitor to your computer.
- **3.** Assemble the external power supply & power cord. (Figure A)
- **4.** Connect the external power supply to the monitor power jack. (Figure B)
- **5.** Plug the power cord into the electrical outlet. (Figure C)
- **6.** Turn on the monitor. (Figure D)
- 7. Power on the computer and the monitor will auto detect the signal source.

G244F E2

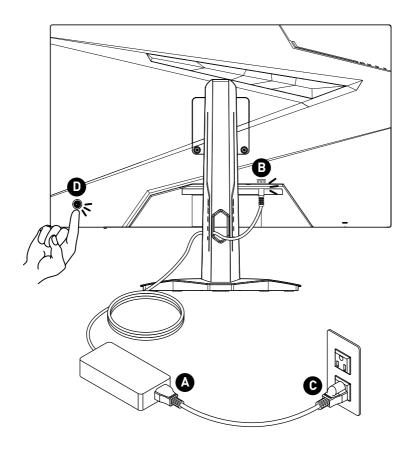

G244PF E2

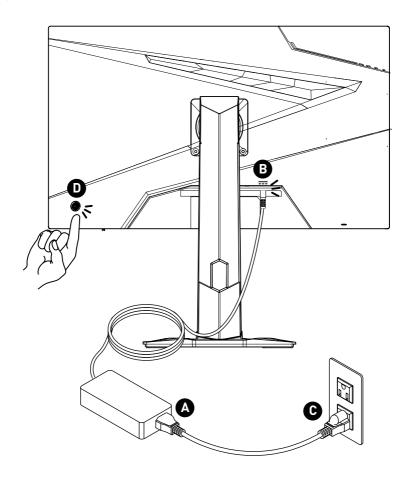

OSD Setup

This chapter provides you with essential information on OSD Setup.




/ Important

All information is subject to change without prior notice.


Navi Key

The monitor comes with a Navi Key, a multi-directional control that helps navigate the On-Screen Display (OSD) menu.

G244F E2

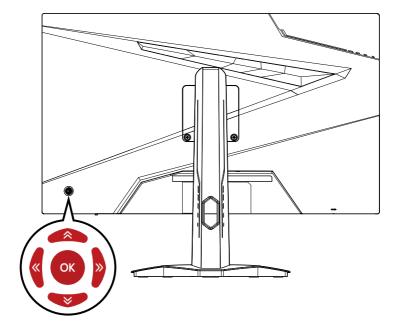

G244PF E2

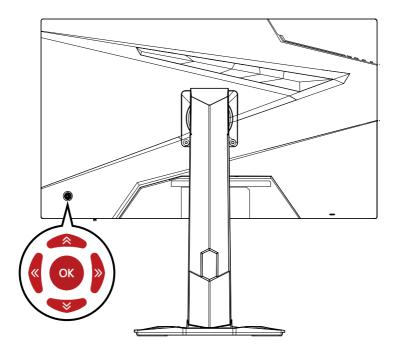

Up/Down/Left/Right:

- selecting function menus and items
- adjusting function values
- entering into/exiting from function menus


Press (OK):

- launching the On-Screen Display (OSD)
- entering submenus
- confirming a selection or setting

Hot Key

- Users may enter into preset function menus by moving the Navi Key up, down, left or right when the OSD menu is inactive.
- Users may customize their own Hot Keys to enter into different function menus.

OSD Menus

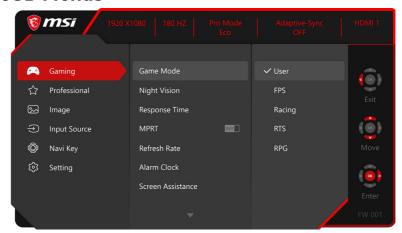



Important

The following settings will be grayed out when HDR signals are received:

- Night Vision
- MPRT
- Low Blue Light

- HDCR
- Brightness
- Contrast

Gaming

1st Level Menu	2nd/3rd Level Menu	Description
Game Mode	User	Use Up or Down Button to select and preview
	FPS	mode effects. • Press the OK Button to confirm and apply your
	Racing	mode type.
	RTS	
	RPG	
Night Vision	OFF	This function optimizes background brightness and is recommended for FPS games.
	Normal	and is recommended for FF3 games.
	Strong	
	Strongest	
	A.I.	

1st Level Menu	2nd/3rd Lev	vel Menu	Description	
Response Time	Normal		Setting to Fastest will reach the shortest	
	Fast		response time and help improve blurred images when playing very fast games.	
	Fastest			
MPRT	OFF		MPRT is available when the refresh rate is over	
	ON		85Hz. Activating MPRT will affect:	
			Affected Function Function Status	
			» Response Time Unable to select	
			» Adaptive-Sync » HDCR	
Refresh Rate	Location	Left Top	Location is adjustable in OSD Menu. Press the	
		Right Top	OK Button to confirm and apply your Refresh Rate Location.	
		Left Bottom	This monitor follows and works at the Operating System's preset Screen Refresh Rate.	
		Right Bottom		
	OFF			
	ON			
Alarm Clock	Location	Left Top	After setting the time, press the OK Button to activate the timer.	
		Right Top	Users have to manually restore their preset	
		Left Bottom	Alarm Clock after any AC power loss and reconnection.	
		Right Bottom		
	OFF			
	15:00	00:01 ~ 99:59		
	30:00	1		
	45:00]		
	60:00			

1st Level Menu	2nd/3rd Level Menu	Description
Screen Assistance	None	Through AI algorithm, this function enhances the visibility of in-game crosshair. Users can select the color and position of the crosshair.
Adaptive-Sync	OFF ON	Adaptive-Sync prevents screen tearing. Activating Adaptive-Sync will affect: Affected Function Function Status NPRT Set to 0FF

Professional

1st Level Menu	2nd Level Menu	Description
Pro Mode	User	Use Up or Down Button to select and preview mode effects.
	Anti-Blue	Press the OK Button to confirm and apply your mode
	Movie	type. • The default setting "Eco" mode meets the
	Office	requirements of TÜV Rheinland's "Low Blue Light" standard and Eyesafe certification.
	sRGB	,
	Eco	
Low Blue Light	OFF	Low Blue Light protects your eyes against blue light. When eachlod Low Blue Light adjusts the career soler. When eachlod Low Blue Light adjusts the career soler.
	ON	When enabled, Low Blue Light adjusts the screen color temperature to a more yellow glow.
		When Pro Mode is set to Anti-Blue, it is mandatory to enable Low Blue Light.
		This monitor is a Low Blue Light backlight monitor, it would decrease the blue light emitted without adjusting OSD function.

1st Level Menu	2nd Level Menu	Description		
HDCR	OFF ON	HDCR enhances image contrast of images. Activating HDCR will aff	. , ,	
		Affected Function	Function Status	
		» MPRT	Set to OFF	
		» Brightness	Unable to select	
MPRT	OFF ON	MPRT is available when the refresh rate is over 85 Activating MPRT will affect:		
		Affected Function	Function Status	
		» Response Time» Brightness	Unable to select	
	» Adaptive-Sync » HDCR	Set to OFF		
Image Enhancement	OFF	Image Enhancement enhances image edges to in		
	Weak	their acutance.		
	Medium			
	Strong			
	Strongest			

Image

1st Level Menu	2nd/3rd Level Menu		Description
Brightness	0-100		Properly adjust Brightness according to the surrounding lighting.
Contrast	0-100		Properly adjust Contrast to relax your eyes.
Sharpness	0-5		Sharpness improves clarity and details of images.
Color Temperature	Cool Normal Warm Customization R (0-100)		Use Up or Down Button to select and preview mode effects. Press the OK Button to confirm and apply your
			mode type. • Users can adjust Color Temperature in
			Customization mode.
		G (0-100)	
		B (0-100)	

1st Level Menu	2nd/3rd Level Menu	Description
Screen Size	Auto	Users can adjust Screen Size in any mode, and the state of the st
	4:3	resolution and any screen refresh rate.
	16:9	

Input Source

1st Level Menu	2nd Level Menu	Description
НДМІ™ 1		Users can adjust Input Source in any mode.
HDMI™ 2		
DP		
Auto Scan	OFF	Users can use the Navi Key to select Input Source at below status:
	ON	While "Auto Scan" is set to "OFF" with the monitor at power saving mode; While "No Signal" message box is shown on the monitor.

Navi Key

1st Level Menu	2nd Level Menu	Description
Up	OFF	All Navi Key items can be adjusted via OSD Menus.
Down Left	Brightness	
Right	Game Mode	
	Screen Assistance	
	Alarm Clock	
	Input Source	
	Refresh Rate	
	Info. On Screen	
	Night Vision	

Setting

1st Level Menu	2nd Level Menu	Description	
Language	繁體中文	Users have to press the OK Button to confirm and apply the Language setting.	
	English	Language is an independent setting. Users' own	
	Français	language setting will override the factory default. When users set Reset to Yes, Language will not be	
	Deutsch	changed.	
	Italiano		
	Español		
	한국어		
	日本語		
	Русский		
	Português		
	简体中文		
	Bahasa Indonesia		
	Türkçe		
	(More languages coming soon)		
Transparency	0~5	Users can adjust Transparency in any mode.	
OSD Time Out	5~30s	Users can adjust OSD Time Out in any mode.	
Power Button	OFF	When set to OFF, users can press the power butto to turn off the monitor.	
	Standby	When set to Standby, users can press the power button to turn off the panel and backlight.	
Info. On Screen	OFF	The information of the monitor status will be shown	
	ON	on the right side of the screen.	

1st Level Menu	2nd Level Menu	Description	
HDMI™ CEC	OFF	HDMITM CEC (Consumer Electronics Control)	
	ON	supports Sony PlayStation®, Nintendo® Switch™, Xbox Series X S consoles and various audio-visual devices that are CEC-capable.	
	If HDMI™ CEC is set to ON:	If HDMI™ CEC is set to ON:	
		The monitor will automatically power on when the CEC device is turned on.	
	when the monitor is tur When Sony PlayStation or Xbox Series X S cons Mode and Pro Mode wi default Eco mode and of	The CEC device will enter power saving mode when the monitor is turned off.	
		 When Sony PlayStation®, Nintendo® Switch™, or Xbox Series X S console is connected, Game Mode and Pro Mode will be automatically set to default Eco mode and can be adjusted to users' preferred modes later. 	
Reset			
	NO	OSD Default in any mode.	

Specifications

Monitor	G244F E2	G244PF E2	
Size	23.8 inch		
Curvature	Flat		
Panel Type	Rapid IPS		
Resolution	1920 x 1080 (FHD)		
Aspect Ratio	16:9		
Brightness	300 nits (typ.)		
Contrast Ratio	1000:1		
Refresh Rate	180Hz		
Response Time	1ms (MPRT)1ms (GTG)6ms (Tr + Tf)		
1/0	HDMI™ Connector x2 DisplayPort x1 Headphone Jack x1		
View Angles	178°(H), 178°(V)		
DCI-P3*/ sRGB	88%/ 118%		
Surface Treatment	Anti-glare		
Display Colors	16.7M (8 bits)		
Monitor Power Options	12.0V === 3.0A		
External Power Supply	Model: ADS-40NP-12-1 12036E		
Power Input	100~240Vac, 50~60Hz, 1.0A		
Power Output	12.0V === 3.0A		
Adjustment (Tilt)	-5° ~ 20°		
Adjustment (Height)		0 ~ 130mm	
Adjustment (Swivel)		-45° ~ 45°	
Adjustment (Pivot)		-90° ~ 90°	
Kensington Lock	Yes		

Monitor		G244F E2	G244PF E2	
VESA Mounting		 Plate Type: 75 x 75 mm Screw Type: M4 x 10 mm Thread Diameter: 4 mm Thread Pitch: 0.7 mm 		
Dimension (W x D x H)		• Thread Length: 10 mm 541.9 x 231.9 x 424.3 mm	541.9 x 196.5 x 399 mm	
Weight	Net Gross	4.2 kg 5.6 kg	4.7 kg 6.4 kg	
Environment	Operating	 Temperature: 0°C to 40°C Humidity: 20% to 90%, non-condensing Altitude: 0 ~ 5000m 		
		• Temperature: -20°C to 60 • Humidity: 10% to 90%, no		

^{*} Based on CIE1976 test standards.

Preset Display Modes



All information is subject to change without prior notice.

Chandard	Decelution		G244F E2, G244PF E2	
Standard	Resolution		HDMI™	DP
VGA	640x480	@60Hz	V	V
		@67Hz	V	V
		@72Hz	V	V
		@75Hz	V	V
Dos-Mode	720x480	@60Hz	V	V
	720x576	@50Hz	V	V
SVGA	800x600	@56Hz	V	٧
		@60Hz	V	V
		@72Hz	V	V
		@75Hz	V	V
XGA	1024x768	@60Hz	V	V
		@70Hz	V	V
		@75Hz	V	V
SXGA	1280x1024	@60Hz	V	V
		@75Hz	V	V
WSXGA+	1680x1050	@60Hz	V	V
Full HD	1920x1080	@60Hz	V	V
		@85Hz	V	V
		@165Hz	V	V
		@180Hz	V	V
Video	720P		V	V
Timing Resolution	1080P	@60Hz	V	V
Resolution		@120Hz	V	V

Troubleshooting

The power LED is off.

- Press the monitor power button again.
- Check if the monitor power cable is properly connected.

No image.

- Check if the computer graphics card is properly installed.
- Check if the computer and monitor are connected to electrical outlets and are turned on.
- Check if the monitor signal cable is properly connected.
- The computer may be in Standby mode. Press any key to activate the monitor.

The screen image is not properly sized or centered.

• Refer to Preset Display Modes to set the computer to a setting suitable for the monitor to display.

No Plug & Play.

- Check if the monitor power cable is properly connected.
- Check if the monitor signal cable is properly connected.
- Check if the computer and graphics card are Plug & Play compatible.

The icons, font or screen are fuzzy, blurry or have color problems.

- · Avoid using any video extension cables.
- Adjust brightness and contrast.
- Adjust RGB color or tune color temperature.
- Check if the monitor signal cable is properly connected.
- Check for bent pins on the signal cable connector.

The monitor starts flickering or shows waves.

- Change the refresh rate to match the capabilities of your monitor.
- Update your graphics card drivers.
- Keep the monitor away from electrical devices that may cause electromagnetic interference (EMI).

Safety Instructions

- Read the safety instructions carefully and thoroughly.
- All cautions and warnings on the device or User Guide should be noted.
- Refer servicing to qualified personnel only.

Power

- Make sure that the power voltage is within its safety range and has been adjusted properly to the value of 100~240V before connecting the device to the power outlet.
- If the power cord comes with a 3-pin plug, do not disable the protective earth pin from the plug. The device must be connected to an earthed mains socket-outlet.
- Please confirm the power distribution system in the installation site shall provide the circuit breaker rated 120/240V, 20A (maximum).
- Always disconnect the power cord or switch the wall socket off if the device would be left unused for a certain time to achieve zero energy consumption.
- Place the power cord in a way that people are unlikely to step on it. Do not place anything on the power cord.
- If this device comes with an adapter, use only the MSI provided AC adapter approved for use with this device.

Environment

- To reduce the possibility of heat-related injuries or of overheating the device, do not place the device on a soft, unsteady surface or obstruct its air ventilators.
- Use this device only on a hard, flat and steady surface.
- To prevent the device from tipping over, secure the device to a desk, wall or fixed object with an anti-tip fastener that helps to properly support the device and keep it safe in place.
- To prevent fire or shock hazard, keep this device away from humidity and high temperature.
- Do not leave the device in an unconditioned environment with a storage temperature above 60°C or below -20°C, which may damage the device.
- The maximum operating temperature is around 40°C.
- When cleaning the device, be sure to remove the power plug. Use a piece of soft cloth rather than industrial chemical to clean the device. Never pour any liquid into the opening; that could damage the device or cause electric shock.
- Always keep strong magnetic or electrical objects away from the device.

- If any of the following situations arises, get the device checked by service personnel:
 - The power cord or plug is damaged.
 - Liquid has penetrated into the device.
 - The device has been exposed to moisture.
 - The device does not work well or you can not get it working according to the User Guide.
 - The device has dropped and damaged.
 - The device has obvious sign of breakage.

TÜV Rheinland Certification

TÜV Rheinland Low Blue Light Certification

Blue light has been shown to cause eye fatigue and discomfort. MSI now offers monitors with TÜV Rheinland Low Blue Light certification to ensure users' eye comfort and well-being. Please follow the instructions below to reduce the symptoms from extended exposure to the screen and blue light.



- Place the screen 20 28 inches (50 70 cm) away from your eyes and a little below eye level.
- Consciously blinking the eyes every now and then will help to reduce eye strain after extended screen time.
- Take breaks for 20 minutes every 2 hours.
- Look away from the screen and gaze at a distant object for at least 20 seconds during breaks.
- Make stretches to relieve body fatigue or pain during breaks.
- Turn on the optional Low Blue Light function.

TÜV Rheinland Flicker Free Certification

 TÜV Rheinland has tested this product to ascertain whether the display produces visible and invisible flicker for the human eye and therefore strains the eyes of users.



- TÜV Rheinland has defined a catalogue of tests, which sets out minimum standards at various frequency ranges. The test catalogue is based on internationally applicable standards or standards common within the industry and exceeds these requirements.
- The product has been tested in the laboratory according to these criteria.
- The keyword "Flicker Free" confirms that the device has no visible and invisible flicker defined in this standard within the range of 0 3000 Hz under various brightness settings.
- The display will not support Flicker Free when Anti Motion Blur/MPRT is enabled. (The availability of Anti Motion Blur/MPRT varies by products.)

Regulatory Notices

CE Conformity

This device complies with the requirements set out in the Council Directive on the Approximation of the Laws of the Member States relating to Electromagnetic Compatibility (2014/30/EU), Low-voltage Directive (2014/35/EU), ErP Directive (2009/125/EC) and RoHS directive (2011/65/EU). This product has been tested and found to comply with the harmonized standards for Information Technology Equipment published under Directives of Official Journal of the European Union.

FCC-B Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the measures listed below:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/television technician for help.

Notice 1

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Notice 2

Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation.

MSI Computer Corp.

901 Canada Court, City of Industry, CA 91748, USA (626) 913-0828

www.msi.com

WEEE Statement

Under the European Union ("EU") Directive on Waste Electrical and Electronic Equipment, Directive 2012/19/EU, products of "electrical and electronic equipment" cannot be discarded as municipal waste anymore and manufacturers of covered electronic equipment will be obligated to take back such products at the end of their useful life.



Chemical Substances Information

In compliance with chemical substances regulations, such as the EU REACH Regulation (Regulation EC No. 1907/2006 of the European Parliament and the Council), MSI provides the information of chemical substances in products at: https://csr.msi.com/global/index

RoHS Statement

Japan JIS C 0950 Material Declaration

A Japanese regulatory requirement, defined by specification JIS C 0950, mandates that manufacturers provide material declarations for certain categories of electronic products offered for sale after July 1, 2006.

https://csr.msi.com/global/Japan-JIS-C-0950-Material-Declarations

India RoHS

This product complies with the "India E-waste (Management and Handling) Rule 2016" and prohibits use of lead, mercury, hexavalent chromium, polybrominated biphenyls or polybrominated diphenyl ethers in concentrations exceeding 0.1 weight % and 0.01 weight % for cadmium, except for the exemptions set in Schedule 2 of the Rule.

Turkey EEE Regulation

Conforms to the EEE Regulations of the Republic Of Turkey

Ukraine Restriction of Hazardous Substances

The equipment complies with requirements of the Technical Regulation, approved by the Resolution of Cabinet of Ministry of Ukraine as of 10 March 2017, \mathbb{N}^2 139, in terms of restrictions for the use of certain dangerous substances in electrical and electronic equipment.

Vietnam RoHS

As from December 1, 2012, all products manufactured by MSI comply with Circular 30/2011/TT-BCT temporarily regulating the permitted limits for a number of hazardous substances in electronic and electric products.

Green Product Features

- Reduced energy consumption during use and stand-by
- Limited use of substances harmful to the environment and health
- · Easily dismantled and recycled
- Reduced use of natural resources by encouraging recycling
- Extended product lifetime through easy upgrades
- Reduced solid waste production through take-back policy

Environmental Policy

- The product has been designed to enable proper reuse of parts and recycling and should not be thrown away at its end of life.
- Users should contact the local authorized point of collection for recycling and disposing of their end-of-life products.



- Visit the MSI website and locate a nearby distributor for further recycling information.
- Users may also reach us at gpcontdev@msi.com for information regarding proper disposal, take-back, recycling, and disassembly of MSI products.

Warning!

Overuse of screens is likely to affect eyesight.

Recommendations:

- 1. Take a 10-minute break for every 30 minutes of screen time.
- 2. Children under 2 years of age should have no screen time. For children aged 2 years and over, screen time should be limited to less than one hour per day.

Copyright and Trademarks Notice

Copyright © Micro-Star Int'l Co., Ltd. All rights reserved. The MSI logo used is a registered trademark of Micro-Star Int'l Co., Ltd. All other marks and names mentioned may be trademarks of their respective owners. No warranty as to accuracy or completeness is expressed or implied. MSI reserves the right to make changes to this document without prior notice.



The terms HDMI™, HDMI™ High-Definition Multimedia Interface, HDMI™ Trade dress and the HDMI™ Logos are trademarks or registered trademarks of HDMI™ Licensing Administrator. Inc.

Technical Support

If a problem arises with your product and no solution can be obtained from the user's manual, please contact your place of purchase or local distributor. Alternatively, please visit https://www.msi.com/support/ for further guidance.